 


 
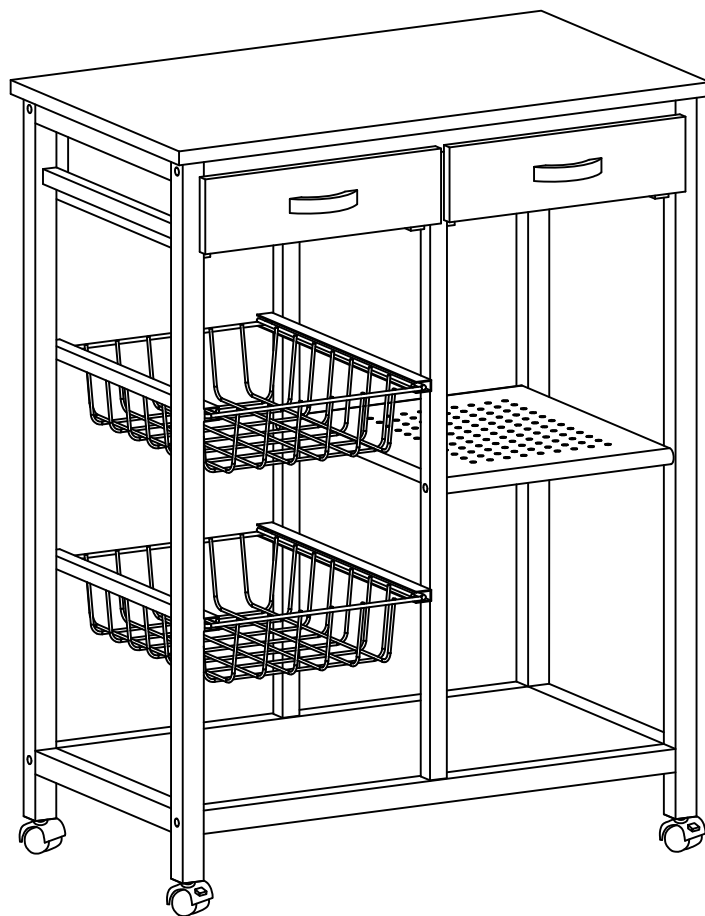 







 
 
 
 
 

 
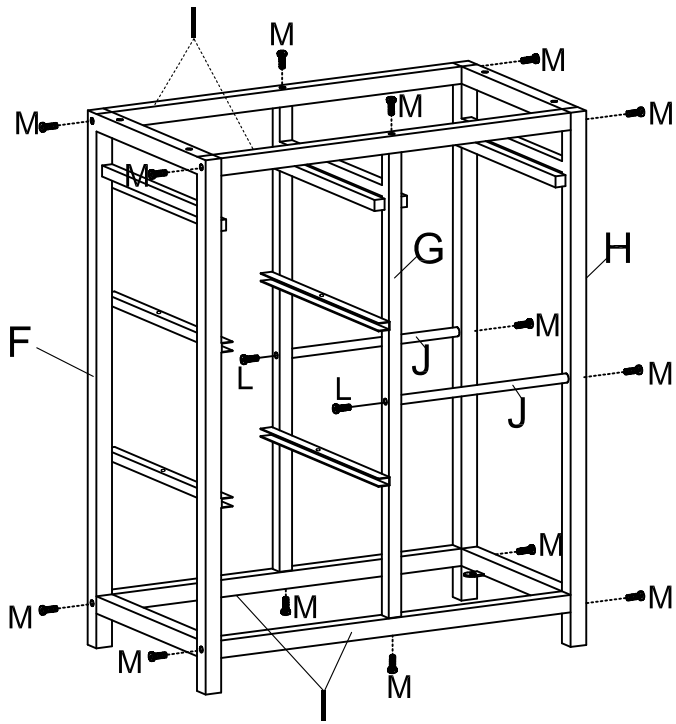 


MONTÁŽNY NÁVOD - HELGA LY 0915 - kuchynský pult

 


					
A×1Ks	B×1Ks	C×2Ks	D×1Ks		
					
E×2Ks	F×1Ks	G×1Ks	H×1Ks		
					
I×4Ks	J×2Ks	K×4Ks	L×6Ks		
					
M×14Ks	N×4Ks	O×2Ks	P×2Ks	Q×1Ks	R×1Ks

 
1.krok



2.krok

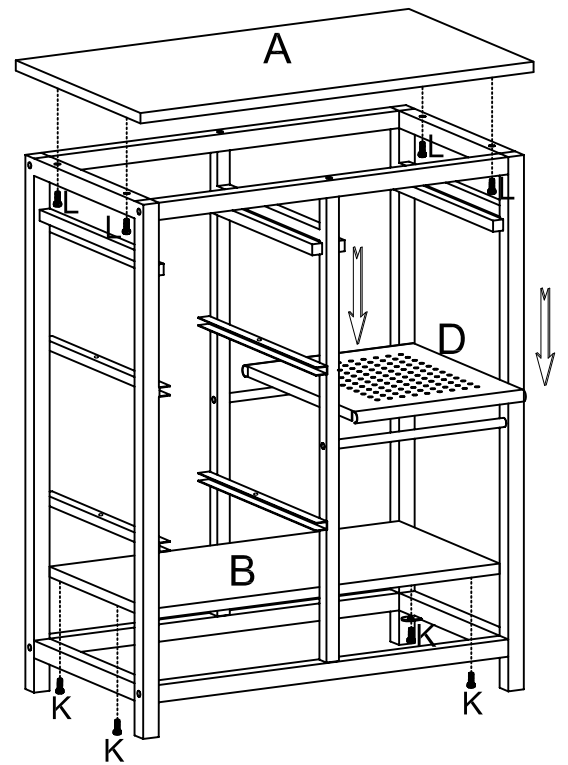

3.krok

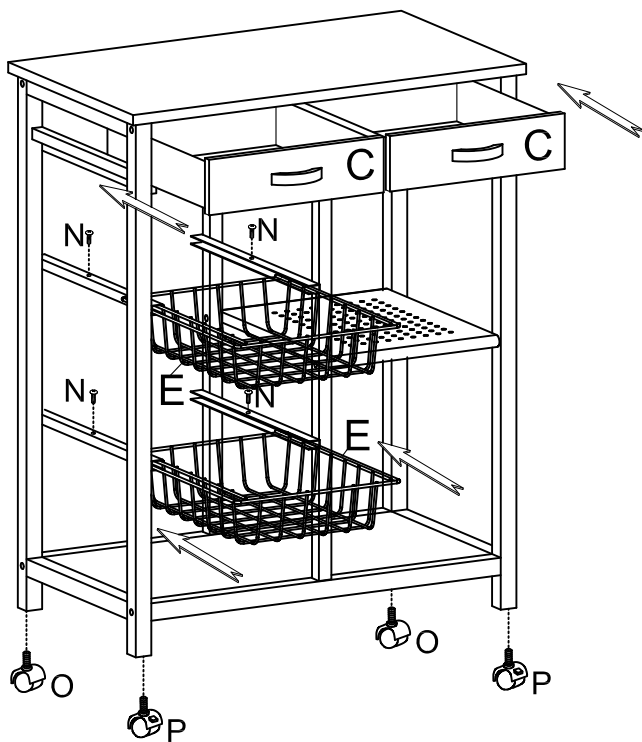

4.krok

